

## BMC ARTIFICIAL MARBLE KITCHEN COUNTER

Thank you for your purchase of our product.  
We kindly ask you to carefully read this instruction manual to ensure the correct and safe use of the product.  
Please keep this manual in a secure place for future reference.

### 1 SAFETY PRECAUTIONS (must be adhered to)

Carefully review the "Safety Precautions" section before using the product to ensure proper usage. Failure to study these precautions can lead to serious consequences, including injuries or property damage.

#### WARNING

**Do not self-disassemble, repair, or modify the product.**  
Failure to comply may result in injury or accidents. For repair assistance, please contact the dealer where the product was purchased.



**Do not get on the counter.**  
Such actions can potentially cause damage to the counter or result in injury.




#### CAUTION

**Do not run around the counter.**  
There is a risk of injury from crashing with corners of the counter.



**For the electrical appliances, stoves, sinks, etc., that are incorporated, please adhere to the manual instructions and the information displayed on the products themselves.**  
Improper installation can lead to unexpected accidents or malfunctions.

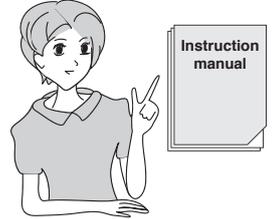

**If you suspect a malfunction, please do not continue to use it as it is.**  
It may cause water leakage and pose a risk of injury.



### 2 USAGE PRECAUTIONS (must be adhered to)

<p><b>Do not scrub the surface with stainless steel scrubber or powdered cleaners.</b> This may cause scratches or alter the surface's shine.</p>	
<p><b>Do not use without cutting board.</b> Using knives or other similar sharp tools directly on the counter may cause scratches on the surface.</p>	
<p><b>Do not subject it to strong impacts.</b> Dropping sharp or heavy objects on the counter surface can cause scratches, deformation, or cracks for the counter, and may also lead to injury.</p>	
<p><b>Do not get on the counter, place heavy objects on it, or subject it to strong impacts from above.</b> This can cause warping, distortion, cracking at the joints, and rippling of the surface.</p>	
<p><b>Do not place items with rubber or plastic legs or those made of rubber materials, on the counter for extended periods.</b> The contact area may discolor. To prevent this, use a stand or some other means to avoid direct contact with the counter.</p>	

<p><b>Do not use strong acidic or alkaline detergents, or bleach.</b> These can cause deterioration or discoloration.</p>	
<p><b>Never leave wet metal products on the counter.</b> Do not leave wet metal items like knives, cans, or pans for extended periods, as they can cause rust stains that are hard to remove.</p>	
<p><b>Wipe off spills immediately.</b> Clean up stains from condiments (soy sauce, vinegar, etc.), dark-colored foods (kimchi, curry, coffee, etc.), or boil-overs right away. If left for a long time, stains may become difficult to remove or cause discoloration.</p>	
<p><b>Use a trivet.</b> Placing hot items like frying pans, earthen pots, or boiling kettles directly on the same spot on the counter for extended periods can cause discoloration or cracking.</p>	
<p><b>Wipe off water droplets from the front of the counter promptly.</b> Leaving them dropping can stain and discolor cabinet doors.</p>	
<p><b>Avoid direct exposure to sunlight.</b> Always use curtains or similar coverings in areas that receive constant direct sunlight. Also, do not expose to spot lighting or germicidal lamps directly, as this may cause discoloration and deformation.</p>	

### 3 PART DESCRIPTION

※The illustration is an example of the product and may differ from the actual product.

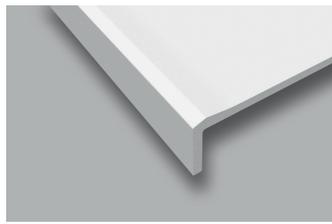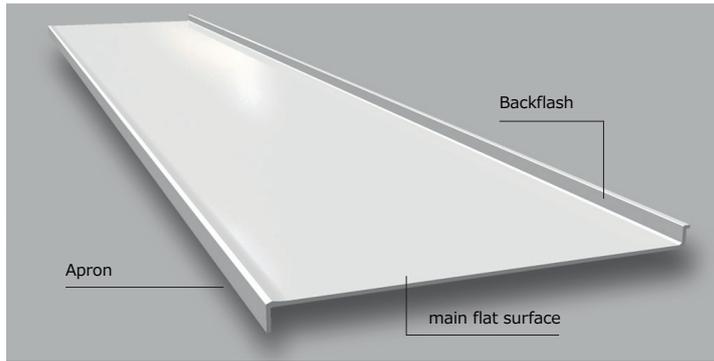

Apron



Backflash

#### ■ Care instructions

To maintain the beauty of the surface, diligent care is important.

## 2 steps of care

① Wipe with water



② Wipe dry



Level of dirt or scratches	Maintenance method
<b>[Daily basis]</b>	1. Wipe thoroughly with damp cloth. 2. Wipe dry with soft cloth. <b>Note :</b> · If stains are left long, they become sticky and hard to remove. · Please take good care of the product.
<b>[Stubborn stains]</b>	Please follow the steps below, one by one, until all stains are removed. 1. Use kitchen neutral detergent and gently wipe away the stains with a soft cloth or sponge. 2. Gently rub with a nylon scrubber. (avoid excessive rubbing, which can cause excessive glossiness). 3. If necessary, gently rub entire area with cream cleanser, avoiding excessive rubbing in one spot to avoid surface variations in glossiness. <b>Note :</b> Make sure to rinse the surface with water to remove any detergent residue, and then wipe it dry with clothes.

### 4 CARE INSTRUCTION

#### ■ Cleaning tools

- ◎ Can be used.
- ▲ Can be used only when necessary.
- ⊗ Cannot be used. Scrubbing may scratch the surface.

Soft cloth (such as cloth for wiping glasses)	Urethane sponge (sponge part)	Net sponge	Nylon dish scrubber (no abrasive particles)	Kitchen scrubber with abrasive particles	Melamine sponge	Stainless steel scrubber
◎	◎	◎	◎	▲	⊗	⊗

※Hardness increases from left to right

#### ■ Detergent

- ◎ Can be used.
- ▲ Can be used only when necessary.
- ⊗ Can not be used. When detergent containing abrasives dries, white marks may adhere to the surface and may not come off. Please wipe with water immediately.

Liquid detergent	Kitchen detergent	Household detergent	Cream cleanser	Powder cleanser
Weak acidic ~ weak alkaline	Weak alkaline	Neutral ~ Weak alkaline	Weak alkaline	Weak alkaline
Remove stains	Remove oil stains, hard water stain, disinfection, deodorization	Remove oil stains, disinfection	Remove sticky stains, oil stains, hard water stain	Remove stubborn stains, oil stains
For stains removable with water. Weak acidity prevent fingerprints. Always wipe with water.	For stains removable with water. Always wipe with water.	Can be used for daily cleaning of any place in households.	The fine particles remove stains and grime.	Stronger abrasive power than cream cleansers. Removes stains with rough particles.
◎	◎	◎	▲	⊗

⑤

⑥

Level of dirt or scratches	Maintenance method
<b>[In case of minor scratches]</b>	1. If necessary, gently rub entire area with cream cleanser, avoiding excessive rubbing in one spot to avoid surface variations in glossiness. 2. Rinse the surface to remove detergent residue, then wipe with dry cloth.
<b>[In case of deep scratches or chips]</b>	If there are deep scratches or chips, please contact the store of purchase. Repair may not be feasible depending on the severity of the damage.
<b>[In case of oily stains]</b>	Wipe off oily stains such as permanent marker, nail polish, and cigarette tar with a tissue or gauze soaked in alcohol, benzene, or nail polish remover.  <b>Note :</b> In either cases, rinse with water to completely remove detergent residue, then wipe with dry cloth.

#### YOSHIMOTO SANGYO

Business hours: 9:00~17:30, Monday to Friday (except Japanese public holiday)

Headquarter · R&D · LABO  
 1-13-8, Imagome, Higashi-Osaka  
 City, Osaka, Japan  
 TEL : 072 967 2001  
 FAX : 072 967 2003

Tokyo Sales Office · LABO  
 Hanai Building 8F, 1-2-9, Shiba  
 Park, Minato-ku, Tokyo, Japan  
 TEL : 03 3434 1700  
 FAX : 03 3434 1710



⑦

⑧