

BMC ARTIFICIAL MARBLE WASHBASIN

Thank you for your purchase of our product.
We kindly ask you to carefully read this instruction manual to ensure the correct and safe use of the product.
Please keep this manual in a secure place for future reference.

1 SAFETY PRECAUTIONS (must be adhered to)

Carefully review this "Safety Precautions" section before using the product to ensure proper usage. Failure to study these precautions can lead to serious consequences, including injuries or property damage.

WARNING

Do not sit on or use the washbasin as a step stool.
This may cause slipping, falling, or injury. It may also deform or break the washbasin.



Do not self-disassemble, repair, or modify the product.
Failure to comply may result in injury or accidents. For repair assistance, please contact the dealer where the product was purchased.



CAUTION

 
Small children or individuals requiring assistance using this product should be accompanied by a caregiver.
Be aware that unexpected injuries may occur.

If any parts are damaged, detached, or loose, request repairs promptly.
Even for small parts, request repairs promptly. Leaving them as is may lead to unexpected accidents, such as injuries or accidental swallowing.


Ensure proper installation of built-in electrical products, water faucets, etc. by following the instructions in the respective manuals and the indications on the main unit.
Failure to follow the instruction manual may potentially result in unforeseen accidents or operational failures.



Do not insert your fingers directly into the overflow or drain.
You may get injured by the edges or internal protrusions.

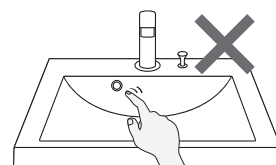


 Do not leave water running unattended.
Overflowing water onto the floor can lead to severe damage.

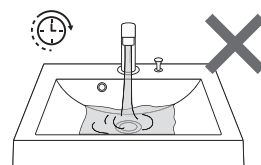


2 USAGE PRECAUTIONS (must be adhered to)

 
Do not leave wet metal items such as hairpins or razor blades in the washbasin.
They may leave rust stains that cannot be removed.

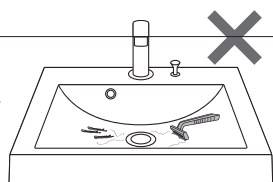

 
Avoid using abrasive cleaners or cleaning tools with abrasive particles (like non-woven pads or scrubbers).
These can scratch the surface and cause damage to the washbasin.

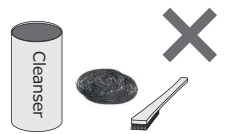

 
Do not subject it to strong impacts.
Dropping sharp or heavy objects on the washbasin can cause scratches, deformation, or cracks, and may lead to injury.

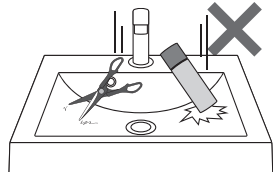

 
Do not use or keep solid or powdered chlorine cleaners, bleach, or slime removers nearby.
Gases generated by reacting with water or humidity may corrode or damage stainless steel and rubber parts. ※Be sure to store them properly.

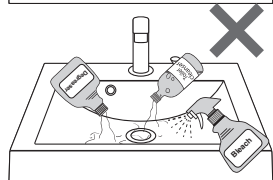

 Do not place or bring lit items like cigarettes or matches near the washbasin.
It may cause damage or burn marks.

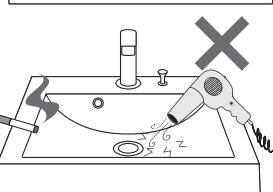

 
Do not expose the product directly to heat from devices like hairdryers.
This may cause warping or discoloration.

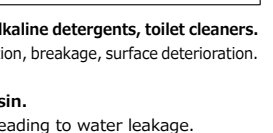


Do not use organic solvents, strong acids and alkaline detergents, toilet cleaners.
It may damage drain plug, causing leaks, discoloration, breakage, surface deterioration.

Do not pour boiling water into the washbasin.
It may deform or damage the drain fittings, leading to water leakage.

 
Avoid direct exposure to sunlight.
Always use curtains or similar coverings in areas that receive constant direct sunlight. Also, do not expose to spot lighting or germicidal lamps directly, as this may cause discoloration and deformation.

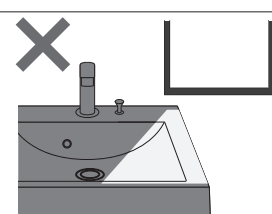

 
If cosmetics, nail polish remover, nail polish, cleansing foam, mouthwash, toothpaste, hair dye, or hair color gets on the surface, wipe it off immediately with a sponge or soft cloth dampened with a neutral detergent.
It may cause discoloration or deformation.

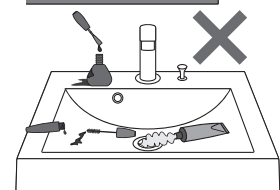

 Do not place soap directly on the washbasin. Always use a soap dish.
Prolonged direct contact may lead to discoloration.

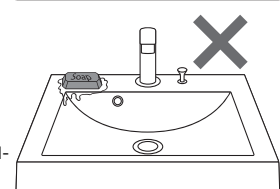

 When removing the U-pipe cap during cleaning, use a bucket to catch the water.
There is a risk of leakage.

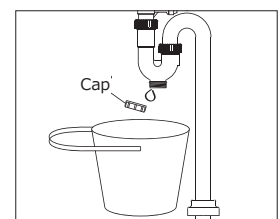


If chlorine-based detergent is used in the washbasin or poured into the drain, flush the washbasin and pipes with a large amount of water afterward to remove any remaining detergent.
It may damage the washbasin or drainage pipes and cause water leakage.

Remove dropped items before running water.
They may clog the drain and cause overflow.


3 PART DESCRIPTION

 - ※ The illustration is an example and may differ from the actual product.
- ※ Please use the faucet in accordance with the faucet's instruction manual.

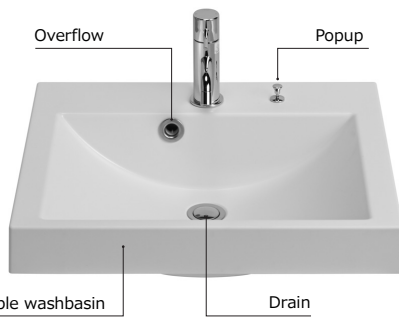


- ※ Pressing or pulling the pop-up knob to open and close the drain stopper.

 【Plastic drain set】

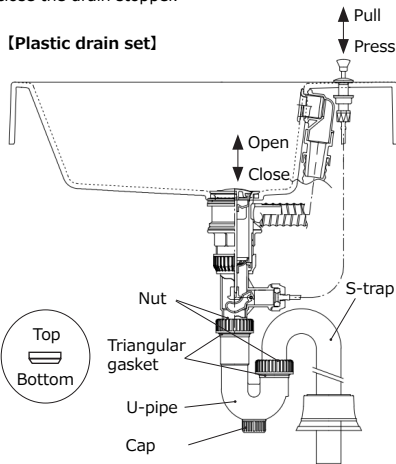

【Valve set】

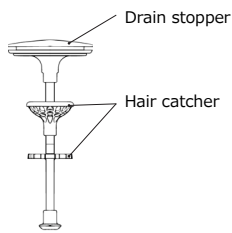 

⑤

■ Care instructions

To maintain the beauty of the product, diligent care is important.

2 steps of care

① Wipe with water



② Wipe dry



Time	Maintenance method
Daily	<p>【Regular Care】</p> <ol style="list-style-type: none"> Wipe thoroughly with damp cloth. Wipe dry with soft cloth. <p>Note:</p> <ul style="list-style-type: none"> If stains are left long, they become sticky and hard to remove. Please take good care of the product. <p>【In case of stubborn stains】</p> <p>Please follow the steps below, one by one, until all stains are removed.</p> <ol style="list-style-type: none"> Use kitchen neutral detergent and gently wipe away the stains with a soft cloth or sponge. Gently rub with a nylon scrubber (avoid excessive rubbing, which can cause excessive glossiness). If necessary, gently rub entire area with cream cleanser, avoiding excessive rubbing in one spot to avoid surface variations in glossiness. <p>Note : Make sure to rinse the surface with water to remove any detergent residue, and then wipe it dry with clothes.</p> <p>【In case of minor scratches】</p> <ol style="list-style-type: none"> If necessary, gently rub entire area with cream cleanser, avoiding excessive rubbing in one spot to avoid surface variations in glossiness. Rinse the surface to remove detergent residue, then wipe with dry cloth. <p>【In case of deep scratches or chips】</p> <p>If there are deep scratches or chips, please contact the store of purchase. Repair may not be feasible depending on the severity of the damage.</p>

⑦

4 CARE INSTRUCTION

■ Cleaning tools

- ◎ Can be used.
- ▲ Can be used only when necessary.
- ✕ Cannot be used. Scrubbing may scratch the surface.

Soft cloth (such as cloth for wiping glasses)	Urethane sponge (sponge part)	Net sponge	Nylon dish scrubber (no abrasive particles)	Kitchen scrubber with abrasive particles	Melamine sponge	Metal scrubber
◎	◎	◎	◎	▲	✕	✕

■ Detergent

※ Hardness increases from left to right

- ◎ Can be used.
- ▲ Can be used only when necessary.
- ✕ Can not be used. When detergent containing abrasives dries, white marks may adhere to the surface and may not come off. Please wipe with water immediately.

Liquid detergent	Kitchen detergent	Household detergent	Cream cleanser	Powder cleanser
Weak acidic ~ weak alkaline	Weak alkaline	Neutral ~ Weak alkaline	Weak alkaline	Weak alkaline
Remove stains	Remove oil stains, hard water stain, disinfection, deodorization	Remove oil stains, disinfection	Remove sticky stains, oil stains, hard water stain	Remove stubborn stains, oil stains
For stains removable with water. Weak acidity prevent fingerprints. Always wipe with water.	For stains removable with water. Always wipe with water.	Can be used for daily cleaning of any place in households.	The fine particles remove stains and grime.	Stronger abrasive power than cream cleansers. Removes stains with rough particles.
◎	◎	◎	▲	✕

⑥

Time	Maintenance method
Daily	<p>【In case of oily stains】</p> <p>Wipe off oily stains such as permanent marker, nail polish, and cigarette tar with a tissue or gauze soaked in alcohol, benzene, or nail polish remover.</p> <p>Note: In either cases, rinse with water to completely remove detergent residue, then wipe with dry cloth.</p>
Once a week	<p>【Cleaning hair catcher】</p> <ol style="list-style-type: none"> Remove the drain stopper and clean the hair catcher using a toothbrush or similar tool. After cleaning, insert the hair catcher carefully, making sure it is oriented correctly.
Once a month	<p>【Water leakage inspection】</p> <ol style="list-style-type: none"> If something is clogged inside the S-trap. <ul style="list-style-type: none"> Remove the S-trap cap and clear any blockage. Since water is retained inside the trap, use a bucket to catch it when removing the cap. Remove the U-pipe cap and clear any blockage. Since water is retained inside the trap, use a bucket to catch it when removing the U-pipe cap. If dirt or hair is accumulated in the drain hair catcher. Remove the hair catcher and clear away any collected dirt or hair. <p>Note : After any cleaning, rinse thoroughly with water to completely remove any detergent, then wipe dry with a cloth.</p>

YOSHIMOTO SANGYO

Business hours: 9:00~17:30, Monday to Friday (except Japanese public holiday)

Headquarter・R&D・LABO
1-13-8, Imagome, Higashi-Osaka
City, Osaka, Japan
TEL : 072 967 2001
FAX : 072 967 2003

Tokyo Sales Office・LABO
Hanai Building 7F, 1-2-9, Shiba
Park, Minato-ku, Tokyo, Japan
TEL : 03 3434 1700
FAX : 03 3434 1710



⑧